

Note:

- Charge the speaker fully before first use.
- The charging time depends on the existing charged levels of the battery and the specifications of the USB adaptor.
- The LED indicator turns off automatically (during charging) when the battery is fully charged.
- The speaker's usage time depends on charge in the battery, mode, volume level, etc.

Specifications:

BT Version	5.3
Max Output	16W RMS
Battery Capacity	2000 mAh
Playback	1-2 hours*
Handsfree Calling	Yes
Dimensions	412 x 67 x 67mm


Inside the box:

- 1 x Bluetooth Soundbar
- 1 x User Manual
- 1 x Charging Cable
- 1 x Warranty Card

IS 616:2017/
IEC 60065:2014



 R-41281930
www.bis.gov.in



Website: www.artis.in
Customer care: 1800 123 8195
Email: inquiry@artis.in

Email: ewaste@artis.in
For E-Waste compliance, please visit
<http://www.artis.in/about/e-waste-policy>

ARTIS



Scan this
QR Code
to explore
Artis products

ARTIS



16W
RMS



RGB
LED Lights



TWS
Dual Spk. Pairing



SoundHub 100

Wireless BT Soundbar

USER MANUAL

SoundHub 100 Wireless BT Soundbar

  Please read this user manual carefully before operating the speaker

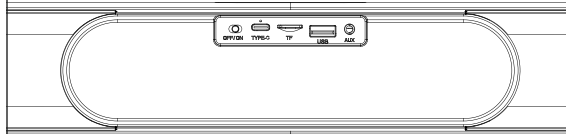

Functions

Wireless Mode: When you turn on the speaker, you will first be in Wireless Mode. To connect, on your mobile device search for "Artis SoundHub 100", and select to connect. In the future, the speaker will automatically connect to the last mobile device it was connected to if it is within range.

- 1.Power Switch:** Switch On/Off your speaker.
- 2.Audio Input:** Use the audio cable to play music directly from your laptop, stereo or other device with 3.5mm headphone output.
- 3.USB Input:** Play music directly from a USB device, Support up to 32GB.
- 4.Micro SD (TF):** Play music directly from your Micro SD card inserted. Micro SD playback begins automatically when Micro SD card is inserted. (When inserting Micro SD Card, keeps pin side on top) Support up to 32GB.

5.DC 5V Input: Use the charging cable to charge your speaker. Connect to a USB adaptor or your laptop.

6.MODE Change Key: Short press the "M" key to change the mode Wireless -FM/Bluetooth/USB/TF Card.(Long press the "▶||" button for 2-3 second to enter the automatic channel search mode. Use FM channel search, you need to plug in the USB charging cable on the speaker.)

7.Vol-/Previous Song: Short press "-" to play previous song, Long press "-" for volume down.

8.Vol+/Next Song: Short press "+" to play next song, long press "+" for volume up.

9. Play/Pause: Short press "▶||" to play/stop playing music.

10. TWS Function: Long press the "▶||" button under Bluetooth mode, you can hear "DIDI" sound, it means 2 speakers are connected successfully. They will Auto Link when turn on speaker next time.

11.Hands-free device: Click the "▶||" button to answer/hang up the call under Bluetooth Mode. Long press the "▶||" button to reject the call. Double-click the "▶||" button to redial the latest number.

12. Led Light: Switch On your speaker, led light will turn on. Long press "*" button to turn on/off the light, click "*" button can change led light mode and switch off the led light.

Troubleshooting

1. Some terminal music players are without automatic switching play function. In this case, a 'pop' noise may be heard between songs.
2. If you cannot wireless connect to your mobile device. Try removing the Speaker from your mobile device's saved devices and re-connect as instructed above.
3. The sound performance may also be affected when there is a weak connection between the mobile device and the speaker. To improve connection, bring the mobile device closer to the speaker or remove any obstacles between the two devices.
4. The sound performance may also be affected if the battery power level is low on the Speaker. Please make sure the speaker is fully charged to improve this issue.