

Bluetooth Pairing

1 Bluetooth connection: the default is Bluetooth when booting, enter Bluetooth mode or press the "M" button to switch to Bluetooth mode, turn on the Bluetooth scan of the mobile phone, click Pair after searching for "Artis SoundMax 600", and there will be a prompt tone after successful connection. When Bluetooth pairing is successful, the Bluetooth indicator lights up steadily.

2 Play music: Open your mobile phone or other Bluetooth device, download and play your favorite songs to play.

3 After the machine is connected with the mobile phone once, Bluetooth has a memory function, which can be automatically connected or manually connected after booting, and if it needs to be disconnected, it can be disconnected through the Bluetooth device of the mobile phone.

TF Card Mode

Insert the TF card, the machine will automatically carry out the rear insertion priority playback, and there is a prompt tone When the TF card is inserted, you can switch by pressing the "M" key shortly.

AUX (External Audio Input) Mode

1 Insert the AUX external audio cable, the speaker will automatically play back and prioritize, and there is a prompt sound

2 When the AUX TF cards are inserted at the same time, you can switch by pressing the "M" key shortly.

Musical Light Description

This product has a variety of music effect lighting effects optional, the default is full-color rotating lighting effect when booting, short press the light key to switch a lighting effect, long press the light key on/off the light

Wireless Microphone Use

The speaker and microphone are turned on at the same time, and the 2.4G wireless signal is automatically paired, at which time the user can start shouting microphone, and at this time, the user can adjust the button to his favorite style according to his hobby.

Note: The size of the accompaniment music can only be adjusted when the microphone is switched to accompaniment mode; Reverb mode can only adjust the reverb multiplier when the microphone switches to reverb mode.

FM Operation Mode

FM operation mode: double-click the mode button to switch to the search mode, single press the play pause button to start automatic channel search, automatically save the station after the search is over, long press the next song to select the station (**Note: when using FM, plug in the charging cable as an antenna**)

Charging Instructions

1. When the battery power is too low, the product will automatically shut down;
2. Use the accessory USB charging cable, connect the USB interface of the standard mobile phone charger to charge, and the charging indicator light is red, indicating that it is charging;
3. Normal charging for 2 hours, after charging, the red light will automatically turn off.
4. Normal continuous use time: about 4 hours.

Warning ⚠

1. If the machine has smoke or other abnormal phenomena, please contact our after-sales service
2. If the inside of the machine is exposed to rain or moisture, please put the machine in a ventilated place to dry.
3. Do not bake this machine with high temperature, otherwise it is easy to burn or make the internal components of the machine fail.
4. This product must not be exposed to excessive heat such as sunlight, fire roasting or similar.
5. Do not throw to avoid falling damage.

ARTIS

For Speaker

IS 616:2017/
IEC 60065:2014



R-41280984
www.bis.gov.in

For Mic

IS 616:2017/
IEC 60065:2014



R-41186856
www.bis.gov.in



Email: ewaste@artis.in
For E-Waste compliance, please visit
<http://www.artis.in/about/e-waste-policy>

Website: www.artis.in
Customer care: 1800 123 8195
Email: inquiry@artis.in



Scan this
QR Code
to explore
Artis products

ARTIS






24W RMS **Sing Along** Wireless Mic **Multicolour** RGB Lights

SoundMax 600
Wireless BT Speaker

USER MANUAL

SoundMax 600 Wireless BT Speaker

   Please read this user manual carefully before operating the speaker

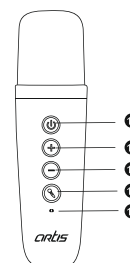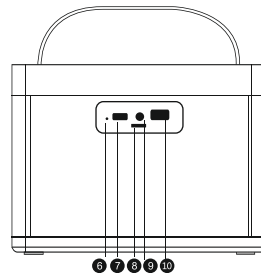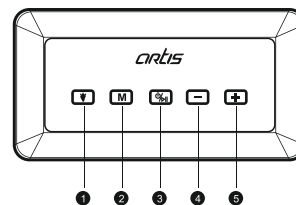

Audio Button Operation

- 1 Light key:** short press to switch the light effect, long press to turn the light on/off
- 2 M key:** short press to switch Bluetooth, USB, TF card ,AUX mode, double-click to force disconnect Bluetooth; (Note: TF card and AUX mode can be switched only if the corresponding device is connected)
- 3 Power on button:** short press play/pause, long press on/off
- 4 - Key:** Short press volume down, long press previous song
- 5 + Key:** Short press volume plus, long press next song
- 6** Charging indicator hole, red light is always on when charging, full electric light off
- 7** TYPE-C charging interface
- 8** TF card interface
- 9** AUX interface
- 10** USB interface

Microphone Button Operation

- 10 Power on button:** long press to turn on and off; Short press to switch: microphone on/off; Double-click to control speaker playback pause.
- 11 + number key:** short press to adjust microphone volume plus, accompaniment volume plus, reverb multiplier plus; Long press to control the next song on the speaker.
- 12 - Number key:** short press to adjust the microphone volume reduction, accompaniment volume reduction, reverberation multiplier reduction; Long press to control the previous song on the speaker.
- 13 Microphone keys:** short press to switch: KTV mode, professional mode, original sound, lol, monster; Long press to cancel vowel on/off; Double-click the microphone, reverb, accompaniment mode switch
- 14** The blue light flashes quickly, the blue light is always on when the wireless phone is connected successfully, the red light is always on when the wireless microphone is charging, the red light is always on when the red light is fully charged, and the red light is turned off when the battery is low, flashing twice every 5 seconds.